ELECTROFLOW DOSING PUMP – EXPLODED VIEWS

P05-ELF-VE-001

Exploded view · Electromagnetic dosing pumps

Exploded views of the ElectroFlow solenoid dosing pump, its suction strainer (foot filter) and its injection valve, with the name of each part.

Exploded view

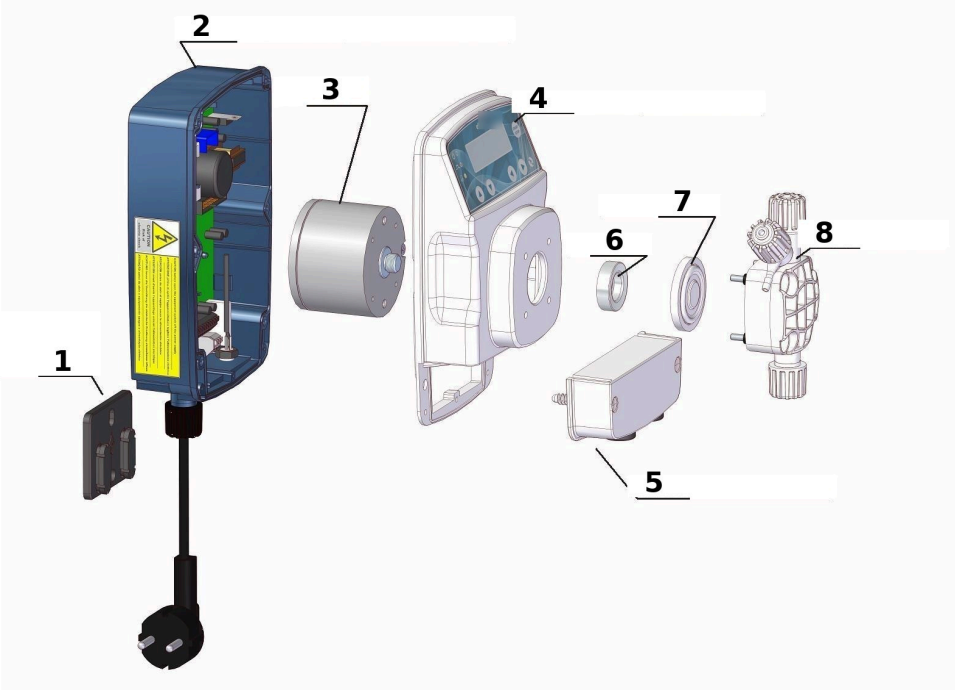

ElectroFlow pump, wall-mounted version

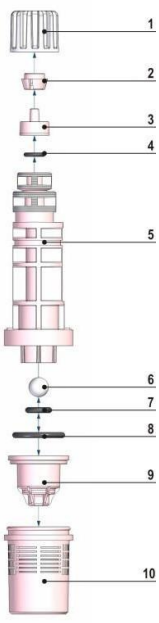

Suction strainer

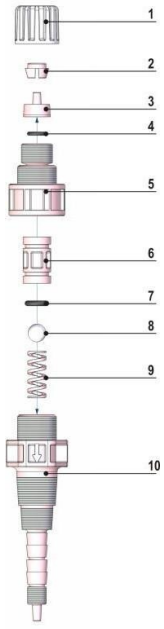

Injection valve

Spare parts

The item numbers refer to the exploded views.

Pump

No.	Description
1	Wall-mounting bracket
2	Lid and circuit board
3	Solenoid
4	Housing and control board
5	Terminal cover
6	Flange
7	Diaphragm
8	Pump head

Suction strainer

No.	Description
1	Clamping nut
2	Ring
3	Nozzle
4	O-ring
5	Strainer body
6	Ceramic ball
7	O-ring
8	O-ring
9	Valve seat
10	Filter basket

Injection valve

No.	Description
1	Clamping nut
2	Ring
3	Nozzle
4	O-ring
5	Injection valve connector
6	Adapter
7	O-ring
8	Ceramic ball
9	Spring
10	Injection valve body

ELECTROFLOW DOSING PUMP – EXPLODED VIEWS

Related documents : P05-ELF-FT-001, P05-ELF-MA-001, P05-ELFPH-FT-001